

INSTALLATION INSTRUCTION

Kyoto - Exterior

WS-W22520



MODERN FORMS
A WAC LIGHTING COMPANY

WARNING

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.

CAUTION

- All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the ETL/CETL listing of this fixture.
CAUTION When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.

AVERTISSEMENT

IMPORTANT : Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

MISE EN GARDE

- Toutes les pièces doivent être utilisées tel qu'il est indiqué dans ces instructions. Ne remplacez pas les pièces, n'en laissez pas de côté et ne les utilisez pas si elles sont usées ou brisées. Le non-respect de ces instructions peut annuler l'homologation ETL/CETL du luminaire. MISE EN GARDE Ors de la manipulation de l'appareil, ne pas appliquer de pression à la LED, tenir l'appareil par la seule base.

ADVERTENCIA

IMPORTANTE: NUNCA intente hacer trabajos sin desconectar el suministro eléctrico.

- Lea y comprenda todas las instrucciones e ilustraciones por completo antes de proceder con el ensamblaje e instalación de esta lámpara.
- Sistema está diseñado para ser instalado por un electricista calificado, de acuerdo con el código eléctrico nacional y las normas locales.
- Diríjase a la caja de fusibles o a la caja del interruptor de circuito principal en su hogar. Coloque el interruptor de alimentación principal en la posición "OFF" (APAGADO).
- Coloque el interruptor de la pared en la posición "OFF" (APAGADO).

PRECAUCIÓN

- Todas las piezas deben usarse como lo indican estas instrucciones. No reemplace las piezas, no omita piezas durante la instalación ni utilice piezas gastadas o rotas. El incumplimiento de esta indicación podría invalidar la calificación ETL/CETL esta lámpara. PRECAUCIÓN Al manipular el aparato, no aplique presión a los LED, mantenga el aparato en la base sólo.

HARDWARE

B1



Junction Box
Screw
Qty: 2pc
+ 1 extra

C1



Wire Connector
Qty: 3pc

E1




Fixture Screw
Qty: 5pc
+ 1 extra

F1



Gasket
Qty: 5pc
+ 1 extra

I1



Plastic
Anchor
Qty: 2pc

J1



Wood Screw
Qty: 2pc

Modern Forms

www.modernforms.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center

44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center

1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585




INSTALLATION INSTRUCTION

Kyoto - Exterior WS-W22520



MODERN FORMS
A WAC LIGHTING COMPANY

Fig.1

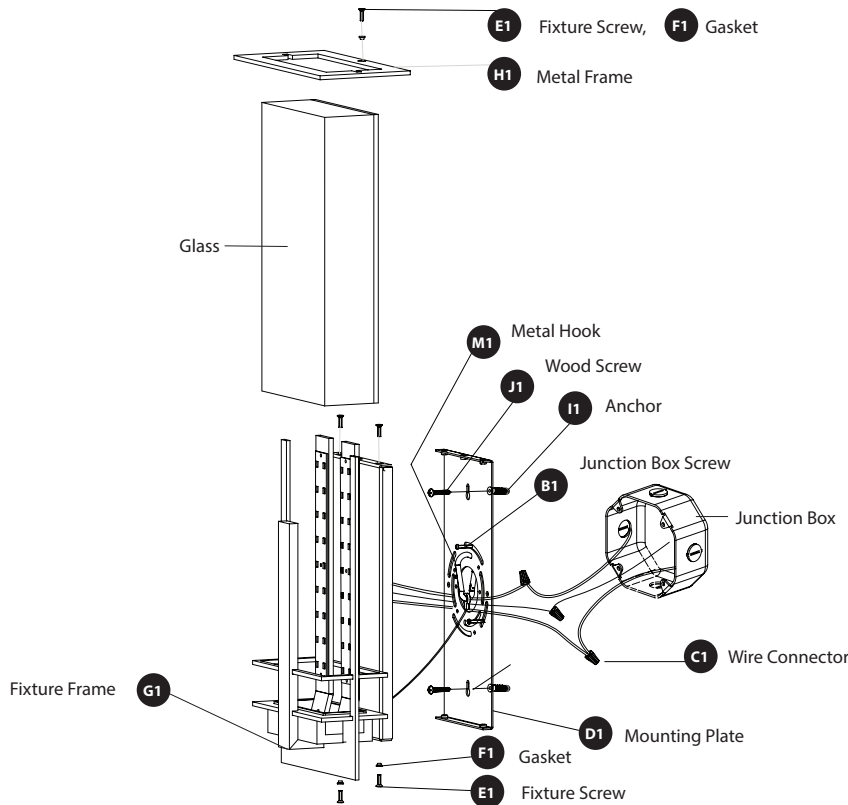

PREPARATION

- Shut off the power at the circuit breaker and remove existing fixture, including the mounting hardware.
Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation

MOUNTING THE FIXTURE (FIG. 1)

1. Drill holes in the proper position on the wall according to the keyholes located on the mounting plate (D1). Insert the plastic anchors (I1) into the wall.
2. Secure the mounting plate (D1) to the junction box (A1) using the junction box screws (B1). Fasten mounting plate (D1) to the wall using the wood screws (J1). The side of the mounting plate marked "GND" must face out.
3. Lock the metal hook (M1) of the safety cable onto the mounting plate.

CONNECTING THE WIRES

4. Connect the fixture wires to supply wires as shown in Fig. 2, making sure that all wire connectors (C1) are secured. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (D1) using the green screw provided. After wires are connected, tuck them carefully inside the junction box (A1).

MOUNTING THE FIXTURE (FIG. 1)

5. Place the fixture frame (G1) over the mounting plate (D1) and secure with set screws (E1) two at the bottom, two at the top and gasket (F1).
6. Put the glass (K1) in the fixture frame (G1) from the top and put the metal frame (H1) on the glass (K1) secure it to the mounting plate (D1) with screws (E1) and gasket (F1).

COMPLETING THE INSTALLATION

7. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. indoor/outdoor silicone sealant) to outline the outside of fixture back plate where it meets the wall. Leave a space at the bottom to allow moisture to escape **Fig.3**

Fig.2 Wiring


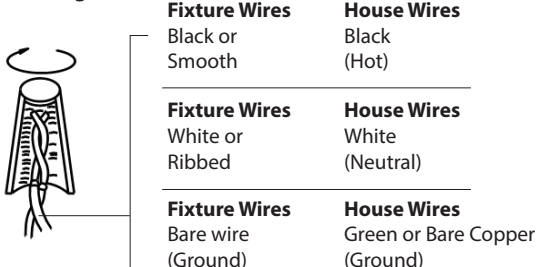


Fig.3 Sealing

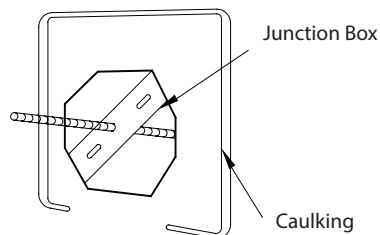

Modern Forms

www.modernforms.com

Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center

44 Harbor Park Drive • Port Washington, NY 11050

Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center

1750 Archibald Ave • Ontario, CA 91761

Phone (800) 526.2588 • Fax (800) 526.2585

